

**RITEHETE**

MODEL NO. ... RH-1000  
VOLTS ..... 120 AC  
WATTS ..... 1000

SERIAL NO.

002991

**OPERATING INSTRUCTIONS  
PRIOR TO CONNECTING TO 120 VAC**

1. Secure unit to tank ensuring electrical control housing is mounted above top edge of tank.
2. Heating element must be emerged in 8" of water.
3. Plug unit into 120 VAC **GROUND**ED 15 AMP **GROUND FAULT** **CIRCUIT INTERRUPTER** protected outlet.
4. Turn switch to **ON** then turn adjusting dial clockwise until indicator light illuminates. (To adjust temperature gradually increase or decrease dial.)
5. If unit fails to operate, **first unplug**, check fuse mounted in rear. (To remove fuse, **push in** and turn counterclockwise).
6. If fuse continues to blow or unit fails to operate - return for repair.

**WARNING:**

**ELECTRICAL CONTROL HOUSING MUST NOT BE SUBMERGED  
IN WATER OR HAVE WATER Poured OR SPLASHED ONTO IT.  
DO NOT ATTEMPT DISASSEMBLY OF THIS UNIT.  
TAMPERING WILL VOID WARRANTY.**